




VASCUTHERM 4 BED HOOK ASSEMBLY

Part Number: 0P2AVT4BHB

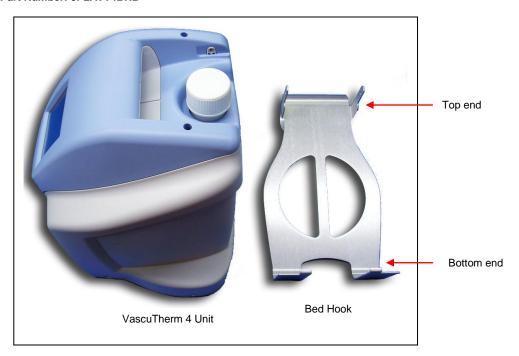

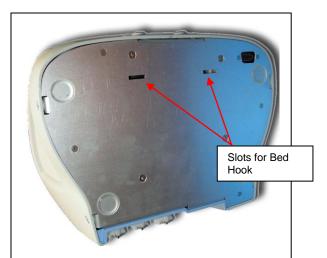

Step 1: Tip the unit onto its side so that the bottom panel is accessible.

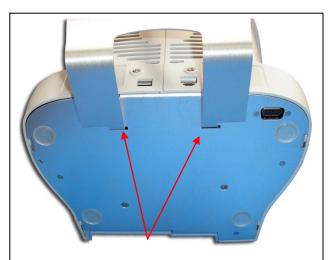


Step 2: Insert the curved notches of the bottom end of the bed hook into the slots on the bottom of the unit.



ThermoTek Document #: 0P1DVT4BHB

Rev: X1 12/12



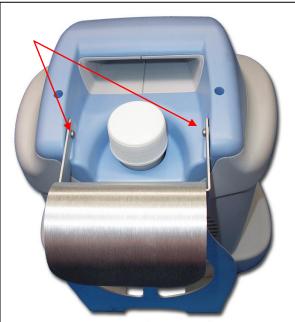

Step 3: Secure the bed hook to the unit. Install (2) provided M3 x 6 pan head screws to the top end of the bracket and to the unit as shown.





ThermoTek Document #: 0P1DVT4BHB

Rev: X1 12/12